


DS001 RX MULTI

In compliance with DIRECTIVE 2014/53/EU

MANUAL RX MULTI 433 TO 868 MHz

1. RX Multi drawing

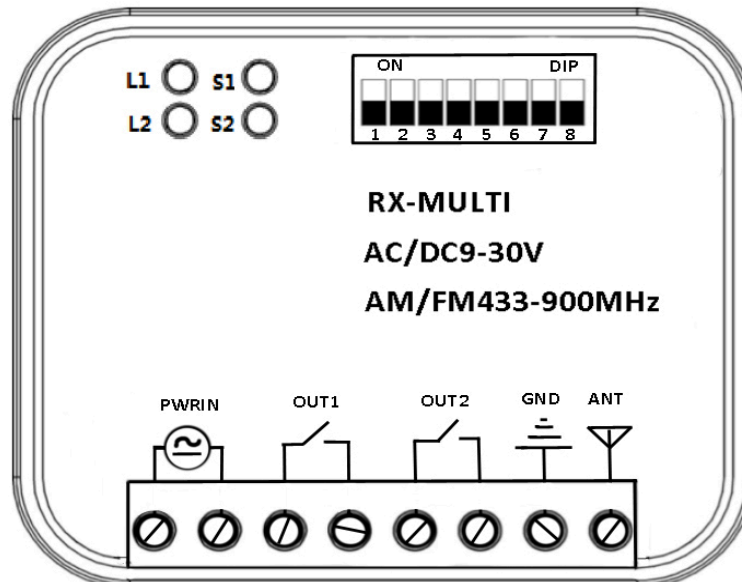

2. Brand selector

With the 8 DIPs selector, the user can make different combinations for different remote brands. The brands selection is shown below in table 1.

3. Learn Button and LED

In RX Multi receiver, there are 2 independent channels. Each channel has independent learn button S1 and S2, and their corresponding LEDs L1 and L2. This receiver can memorize up to 250 remotes per channel.

- Channel 1 and 2 are set as monostable, the output is activated for 3 seconds.

4. Power Input Selector

The RX Multi can work at input AC/DC 9 V ~ 30 V. However, it's better to change the jumper according to the power supply. If the input is over 24 V, shorten pin 2&3; shorten 1&2 if input is less than 24 V (See image from section 8).

5. Exchangeable Memory Card

The memory card can be removed from the board to be inserted in a different receiver; this way the user can preserve all the remotes learned in the memory card. See image from section 8.

DS001 RX MULTI

6. Programming one button or remote:

1. First, select the DIPs combination of the chosen remote's brand that will be programmed following table 1.
2. Press the learn button (S1 or S2), the corresponding LED turns on.
3. Press the button of the remote you want to programme, the LED L1 or L2 flashes for 5 seconds, this shows remote button entered the RX Multi successfully.

Repeat steps 2 and 3 for another button or remote.


7. Erase all data in memory card:

By pressing for few seconds the button S1 or S2, the LED will be fixed. Keep pressing this button until the LED turns off. All data in the memory card will be erased permanently.

NOTICE: Be careful at erasing all data in the memory card. The data will be erased permanently and CANNOT be recovered.

8. Details picture

Location of LEDs, buttons, DIP selector, memory card and jumper.

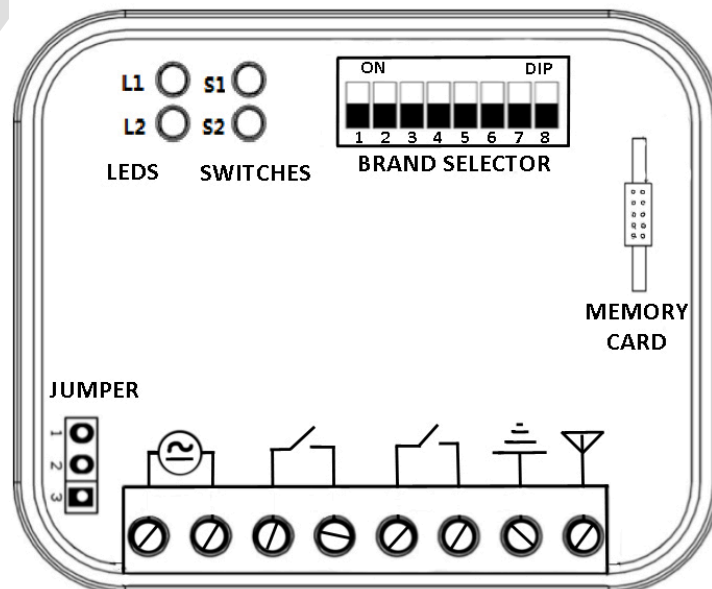

DS001 RX MULTI

Tabla1: Selección de Marcas

Table1: Brands' selection

ITEM	SELECTION DIP SWITCH	BRAND	FREQ	NOTES
1		NICE FLORS	433.92 MHz	
2		MARANTEC	433.92 MHz	
3		Universal Fixed Code Código Fijo	433.92 MHz	Fixed Code
4		FAAC SLH Rolling Code	433.92 MHz	
5		Liftmaster	310 MHz	
6		Liftmaster	390 MHz	
7		Liftmaster	433.92 MHz	

DS001 RX MULTI

8	1 2 3 4 5 6 7 8 	Universal Rolling Open Code	433.92 MHz	Open Code
9	1 2 3 4 5 6 7 8 	Universal Rolling Open Code	315 MHz	Open Code
10	1 2 3 4 5 6 7 8 	Universal Rolling Open Code	318 MHz	Open Code
11	1 2 3 4 5 6 7 8 	Universal Rolling Code ASK	868 MHz	Open Code
12	1 2 3 4 5 6 7 8 	Universal Rolling Code FSK	868 MHz	Open Code
13	1 2 3 4 5 6 7 8 	Universal Fixed Code Código Fijo	300 MHz	Fixed Code
14	1 2 3 4 5 6 7 8 	Universal Fixed Code Código Fijo	310 MHz	Fixed Code
15	1 2 3 4 5 6 7 8 	Universal Fixed Code Código Fijo	315 MHz	Fixed Code

DS001 RX MULTI

16	<p>1 2 3 4 5 6 7 8</p>	<p>Universal Fixed Code Código Fijo</p>	318 MHz	Fixed Code
17	<p>1 2 3 4 5 6 7 8</p>	<p>Universal Fixed Code Código Fijo</p>	330 MHz	Fixed Code
18	<p>1 2 3 4 5 6 7 8</p>	<p>Universal Fixed Code Código Fijo</p>	390 MHz	Fixed Code
19	<p>1 2 3 4 5 6 7 8</p>	<p>Universal Fixed Code Código Fijo</p>	868 Mhz	Fixed Code
20	<p>1 2 3 4 5 6 7 8</p>	<p>Liftmaster Rolling Code Billioncode</p>	390 MHz	
21	<p>1 2 3 4 5 6 7 8</p>	<p>Liftmaster Rolling Code</p>	315 MHz	
22	<p>1 2 3 4 5 6 7 8</p>	<p>Hormann Marantec Berner</p>	868 MHz	

DS001 RX MULTI

23	<p>1 2 3 4 5 6 7 8</p>	FAAC SLH	868 MHz	
24	<p>1 2 3 4 5 6 7 8</p>	Prastel	433.92 MHz	
25	<p>1 2 3 4 5 6 7 8</p>	Sommer	868.80 MHz	
26	<p>1 2 3 4 5 6 7 8</p>	Sommer	434.4 MHz	
27	<p>1 2 3 4 5 6 7 8</p>	Liftmaster Rolling Code	868.30 MHz	
28	<p>1 2 3 4 5 6 7 8</p>	Clemsa Mastercode	433.92 MHz	
29	<p>1 2 3 4 5 6 7 8</p>	DITEC	315 MHz	



DS001 RX MULTI

30	<p>1 2 3 4 5 6 7 8</p>	DITEC	390 MHz	
31	<p>1 2 3 4 5 6 7 8</p>	DITEC	433.92 MHz	
32	<p>1 2 3 4 5 6 7 8</p>	V2	315 MHz	
33	<p>1 2 3 4 5 6 7 8</p>	V2	390 MHz	
34	<p>1 2 3 4 5 6 7 8</p>	V2	433.92 MHz	
35	<p>1 2 3 4 5 6 7 8</p>	MARANTEC	868.30 MHz	
36	<p>1 2 3 4 5 6 7 8</p>	Aprimatic Encrypted Code	433.92 MHz	

DS001 RX MULTI

37	<p>1 2 3 4 5 6 7 8</p>	<p>Aprimatic Encrypted Code</p>	<p>868.3 MHz</p>	
38	<p>1 2 3 4 5 6 7 8</p>	<p>JCM TECH</p>	<p>868.3 MHz</p>	
39	<p>1 2 3 4 5 6 7 8</p>	<p>P.N.C</p>	<p>868.3 MHz</p>	
40	<p>1 2 3 4 5 6 7 8</p>	<p>MAP</p>	<p>868.3 MHz</p>	
41	<p>1 2 3 4 5 6 7 8</p>	<p>FORSA</p>	<p>868.3 MHz</p>	
42	<p>1 2 3 4 5 6 7 8</p>	<p>ALMA</p>	<p>868.3 MHz</p>	

DS001 RX MULTI

43		DMiL	868.3 MHz	
44		CEA	868.3 MHz	
45		Roper	868.3 MHz	

NOTA: Para dar de alta el mando de la marca FAAC en el RX MULTI seguir los siguientes pasos:

- 1- Presionar al mismo tiempo los canales 2 y 3 del mando de FAAC, el mando comenzará a parpadear.
- 2- Presionar en el RX MULTI el canal donde se grabará el mando. El led se queda fijo.
- 3- Presionar varias veces el botón del mando de FAAC que quiera grabar.

NOTE: To programme a FAAC remote in the RX MULTI please follow the next steps:

- 1- Press at the same time channels 2 and 3 on the FAAC remote, the remote LED will start flashing.
- 2- Press in the RX MULTI the channel where you want programme the remote. The LED stays fixed.
- 3- Press several times the button of the FAAC remote you want to programme.